


# 10K, 12K and 15K Hub Groups

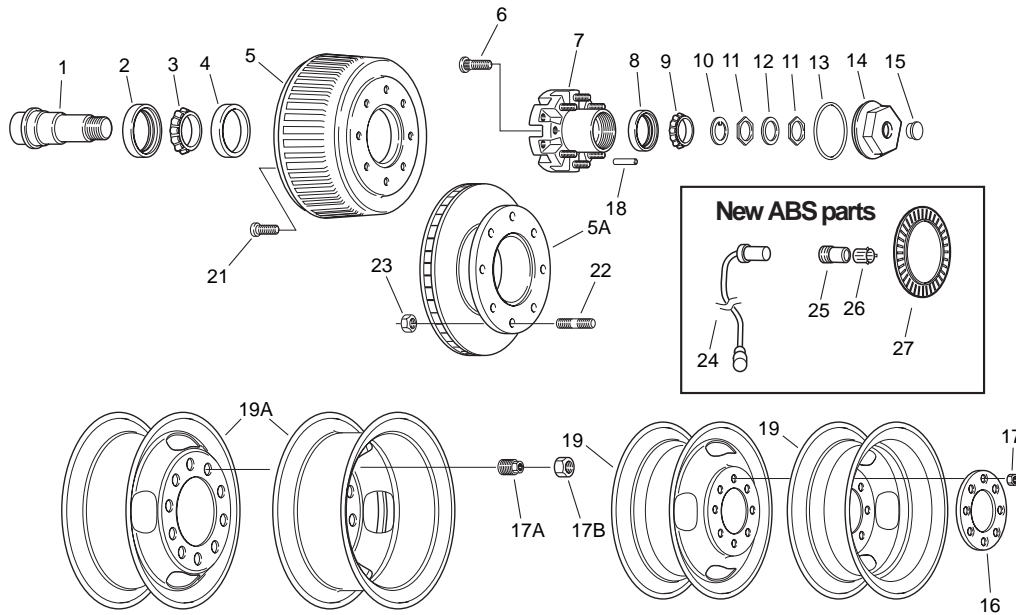

Item	Description	10K		12K		15K		15K		15K
		8 on 6.50	8 on 6.50	10 on 11.25	8 on 6.50	8 on 6.50	8 on 6.50	10 on 8.75	6 on 8.75	10 on 11.25
2	Unitized Oil Seal	010-056-00	010-056-00	010-056-00	010-056-00	010-056-00	010-056-00	010-056-00	010-056-00	010-056-00
3	Inner Bearing Cone	031-022-02 (395S)	031-022-02 (395S)	031-022-02 (395S)	031-022-02 (3984)	031-020-02 (3984)	031-020-02 (3984)	031-020-02 (3984)	031-020-02 (3984)	031-020-02 (3984)
4	Inner Bearing Cup	031-022-01 (394A)	031-022-01 (394A)	031-022-01 (394A)	031-020-01 (3920)	031-020-01 (3920)	031-020-01 (3920)	031-020-01 (3920)	031-020-01 (3920)	031-020-01 (3920)
5	Brake Drum	009-027-01		009-027-01	009-028-01	009-028-01		009-028-01	009-028-01	009-028-01
5	Brake Drum-ABS	009-027-03		009-027-05	009-028-05	009-028-05		009-028-05	009-028-05	009-028-05
5A	Brake Drum Rotor		070-006-01				070-006-01			
5A	Brake Drum Rotor-ABS		070-006-02				070-006-02			
6	Wheel Mtg. Stud RH	007-115-00	007-115-00	007-102-01	007-115-00	007-115-00	007-115-00	025-013-01	025-013-01	007-102-01
	Wheel Mtg. Stud LH	None	None	007-102-02	None	None	None	025-013-02	025-013-02	007-102-02
7	Hubs w/Cups & StudsRH	008-214-05	008-214-06	008-263-08	008-216-08	008-214-08	008-214-10	008-217-05	008-217-09	008-263-11
	Hubs w/Cups & StudsLH	None	None	008-263-28	None	None	None	008-217-25	008-217-29	008-263-31
8	Outer Bearing Cone	031-019-01 (382A)	031-019-01 (382A)	031-019-01 (382A)	031-021-01 (28622)	031-021-01 (28622)	031-021-01 (28622)	031-021-01 (28622)	031-021-01 (28622)	031-021-01 (28622)
9	Outer Bearing Cup	031-019-02 (387A)	031-019-02 (387A)	031-019-02 (387A)	031-021-02 (28682)	031-021-02 (28682)	031-021-02 (28682)	031-021-02 (28682)	031-021-02 (28682)	031-021-02 (28682)
10	Spindle Washer	005-060-00	005-060-00	005-060-00	005-060-00	005-060-00	005-060-00	005-060-00	005-060-00	005-060-00
11	Spindle Nut	006-084-00	006-084-00	006-084-00	006-084-00	006-084-00	006-084-00	006-084-00	006-084-00	006-084-00
12	Tang Washer	005-059-00	005-059-00	005-059-00	005-059-00	005-059-00	005-059-00	005-059-00	005-059-00	005-059-00
13	Oil Cap "O" ring	010-050-00	010-050-00	010-050-00	010-050-00	010-050-00	010-050-00	010-050-00	010-050-00	010-050-00
14	Oil Cap	021-036-00	021-036-00	021-036-00	021-036-00	021-036-00	021-036-00	021-036-00	021-036-00	021-036-00
15	Oil Cap Plug	046-032-00	046-032-00	046-032-00	046-032-00	046-032-00	046-032-00	046-032-00	046-032-00	046-032-00
16	Wheel Clamp Ring	033-052-01	033-052-01		033-052-01	033-052-01	033-052-01			
17	Wheel Nut RH	006-109-00	006-109-00	006-064-01	006-109-00	006-109-00	006-109-00			006-064-01
	Wheel Nut LH			006-064-02						006-064-02
17A	Inner Nut RH							006-069-01	006-069-01	
	Inner Nut LH							006-069-02	006-069-02	
17B	Outer Nut RH							006-070-01	006-070-01	
	Outer Nut LH							006-070-02	006-070-02	
18	Locating Pin	056-008-00	056-008-00		056-008-00	056-008-00				
19	14.5 x 7.00 MH Dual				017-186-00					
	16 x 6K Dual		017-279-00			017-279-00	017-279-00			
	16.5 x 6.75 Dual	017-157-00	017-157-00		017-157-00	017-157-00				
	17.5 x 6.75 HC Dual							017-185-00		
ns	17.5 x 8.25 HC Single	017-176-00	017-176-00		017-176-00	017-176-00				
	17.5 x 6.75 HC	017-298-00	017-298-00							
21	Drum Mounting Screw	007-244-00		007-244-00	007-244-00	007-244-00		007-244-00	007-244-00	007-244-00
22	Rotor Mounting Stud		025-014-00				025-014-00			
23	Rotor Mounting Nut		006-046-00				006-046-00			
24	ABS Sensor, straight	097-004-00	097-004-00	097-004-00	097-004-00	097-004-00	097-004-00	097-004-00	097-004-00	097-004-00
25	ABS Sensor Block	024-204-00	024-204-00	024-204-00	024-204-00	024-204-00	024-204-00	024-204-00	024-204-00	024-204-00
26	ABS Sensor Clip	097-002-00	097-002-00	097-002-00	097-002-00	097-002-00	097-002-00	097-002-00	097-002-00	097-002-00
27	ABS Tone Ring	024-203-00	024-203-00	024-203-00	024-203-00	024-203-00	024-203-00	024-203-00	024-203-00	024-203-00

NS - not shown