



# Forward Self-Adjusting Electric Brake

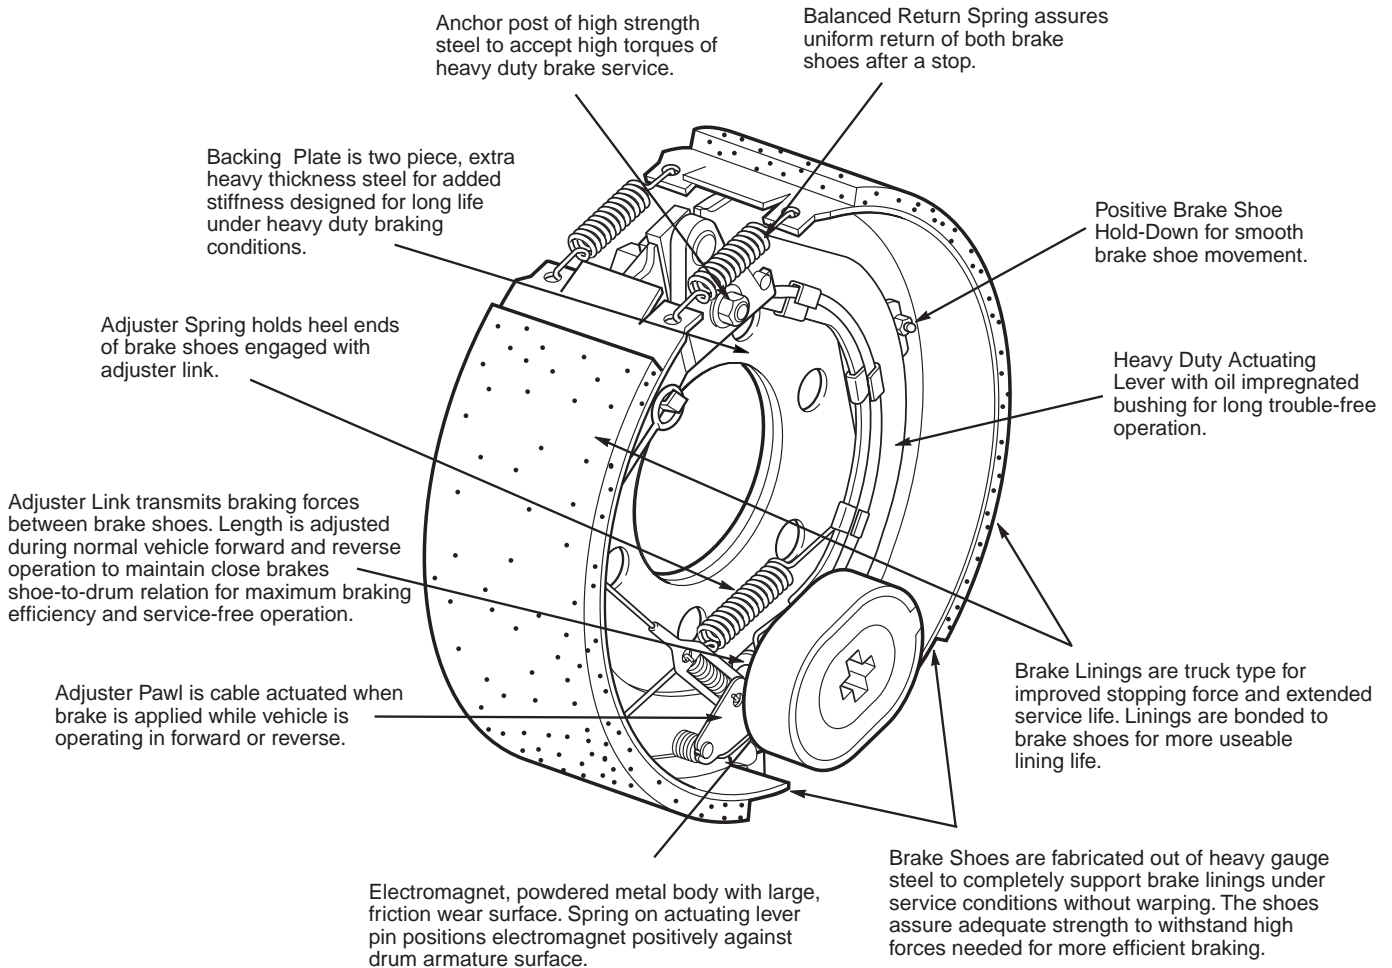

Size	Capacity	Part No. LH	Part No. RH
12 $\frac{1}{4}$ x3 $\frac{3}{8}$ "	9K, 10K GD	023-195-00	023-196-00
12 $\frac{1}{4}$ x4"	10K	023-198-00	023-199-00
12 $\frac{1}{4}$ x5"	12K	023-201-00	023-202-00
12 $\frac{1}{4}$ x5"	15K	023-204-00	023-205-00

# Electric Brake Parts

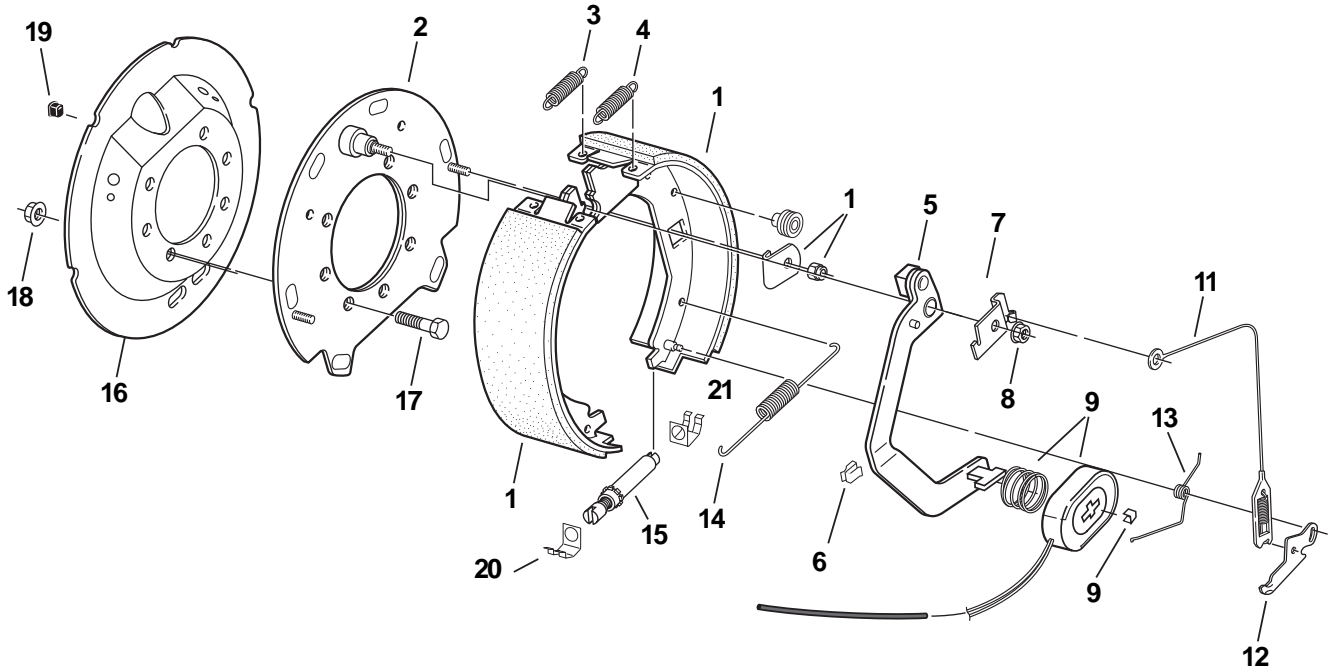

Item	Description	Qty. Per Brake	12 <sup>1</sup> / <sub>4</sub> x 3 <sup>3</sup> / <sub>8</sub> 9K & 10K GD Part No.	12 <sup>1</sup> / <sub>4</sub> x 4 10K Part No.	12 <sup>1</sup> / <sub>4</sub> x 5 12K Part No.	12 <sup>1</sup> / <sub>4</sub> x 5 15K Part No.
1	LH Shoe & Lining Kit containing:	1	K71-049-00	K71-051-00	K71-053-00	K71-053-00
	LH Primary	1	040-110-01	040-108-01	040-102-01	040-102-01
	LH Secondary	1	040-111-02	040-109-02	040-103-02	040-103-02
	Shoe Hold Down Washer	2	005-107-00	005-107-00	005-107-00	005-107-00
	Lock Nut	2	006-127-00	006-127-00	006-127-00	006-127-00
1	RH Shoe & Lining Kit containing:	1	K71-050-00	K71-052-00	K71-054-00	K71-054-00
	RH Primary	1	040-111-01	040-109-01	040-103-01	040-103-01
	RH Secondary	1	040-110-02	040-108-02	040-102-02	040-102-02
	Shoe Hold Down Washer	2	005-107-00	005-107-00	005-107-00	005-107-00
	Lock Nut	2	006-127-00	006-127-00	006-127-00	006-127-00
2	Backing Plate Assembly	1	036-072-05	036-072-05	036-072-06	036-072-06
3	Shoe Return Spring (Rear-Black)	1	046-071-00	046-071-00	046-071-00	046-071-00
4	Shoe Return Spring (Front-Green)	1	046-083-00	046-083-00	046-083-00	046-083-00
5	LH Actuator Arm Assembly	1	047-123-38	047-123-06	047-123-04	047-123-04
	RH Actuator Arm Assembly	1	047-123-37	047-123-05	047-123-03	047-123-03
6	Wire Clip	3	027-039-00	027-039-00	027-039-00	027-039-00
7	LH Arm/Shoe Retainer	1	071-455-01	071-455-01	071-455-01	071-455-01
	RH Arm/Shoe Retainer	1	071-455-02	071-455-02	071-455-02	071-455-02
8	Flange Nut	1	006-062-00	006-062-00	006-062-00	006-062-00
9	Magnet Kit containing:	1	K71-376-00	K71-376-00	K71-377-00	K71-378-00
	Magnet Retainer Clip	1	027-050-00	027-050-00	027-050-00	027-050-00
	Magnet Assembly	1	042-129-00	042-129-00	042-130-00	042-131-00
	Magnet Mtg. Spring	1	046-117-00	046-117-00	046-117-00	046-117-00
11	Adjuster Cable	1	071-020-00	071-020-00	071-020-00	071-020-00
12	LH Adjuster Lever	1	071-019-01	071-019-01	071-019-01	071-019-01
	RH Adjuster Lever	1	071-019-02	071-019-02	071-019-02	071-019-02
13	LH Adjuster Lever Spring	1	046-073-00	046-073-00	046-073-00	046-073-00
	RH Adjuster Lever Spring	1	046-074-00	046-074-00	046-074-00	046-074-00
14	Adjuster Spring	1	046-072-00	046-072-00	046-072-00	046-072-00
15	LH Adjuster Assembly	1	048-009-00	048-009-00	048-009-00	048-009-00
	RH Adjuster Assembly	1	048-010-00	048-010-00	048-010-00	048-010-00
16	Dust Shield Kit	1	036-115-21	036-115-22	036-115-23	036-115-23
17	Brake Mounting Screw	7	007-116-00	007-116-00	007-116-00	007-116-00
18	Brake Mounting Nut	7	006-092-00	006-092-00	006-092-00	006-092-00
19	Sleeve	1	027-014-00	027-014-00	027-014-00	027-014-00
20	Adjuster Clip (Thread End)	1	046-132-00	046-132-00	046-132-00	046-132-00
21	Adjuster Clip (Barrel End)	1	046-133-00	046-133-00	046-133-00	046-133-00
ns	Wire Grommet	1	046-016-00	046-016-00	046-016-00	046-016-00